

CAR SHARING D-CAR S



DUNASYS CONNECT

TECHNICAL OFFICE : 18 VILLA BLANCHE 92000 NANTERRE
TEL : +33 (0)9 72 38 37 98
CONTACT@DUNASYS.COM

LEGAL NOTICE

DUNASYS CONNECT SAS capital : 1000 €
RCS CHARTRES 809283864 - SIRET 80928386400027



CONTACT US :

+33 (0)9 72 38 37 98
contact@dunasys.com

18, Villa Blanche
92 000 NANTERRE


A Turnkey Solution :

Connected fleet management is gradually becoming essential, and real-time management technologies a necessity. Software for managing car-sharing fleets is developing strongly, and the use of on-board telematics is growing steadily. Thanks to them, you can easily check the condition of your vehicle, optimize its rotation rate and improve your journeys.


DUNASYS CONNECT innovates in terms of Fleet management and car-sharing services.

How does it work ?

- ▶ Reservations and rentals are completely dematerialized.
- ▶ Opening and closing the vehicle, as well as tracking, is done remotely, via smartphone and mobile app.
- ▶ There's a simple solution for elderly people and those without smartphones: "RFID badges".
- ▶ The user's smartphone or a magnetic badge can be used to open, start and close each vehicle, making it accessible 24/7.
- ▶ The fleet manager has instant access to all fleet data.

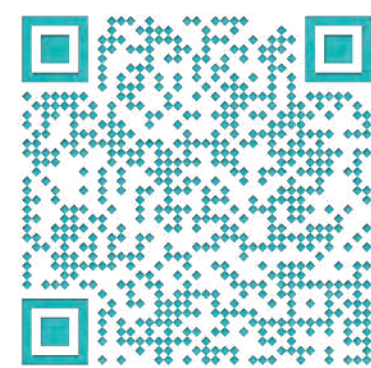

Scan the QR code to discover our product

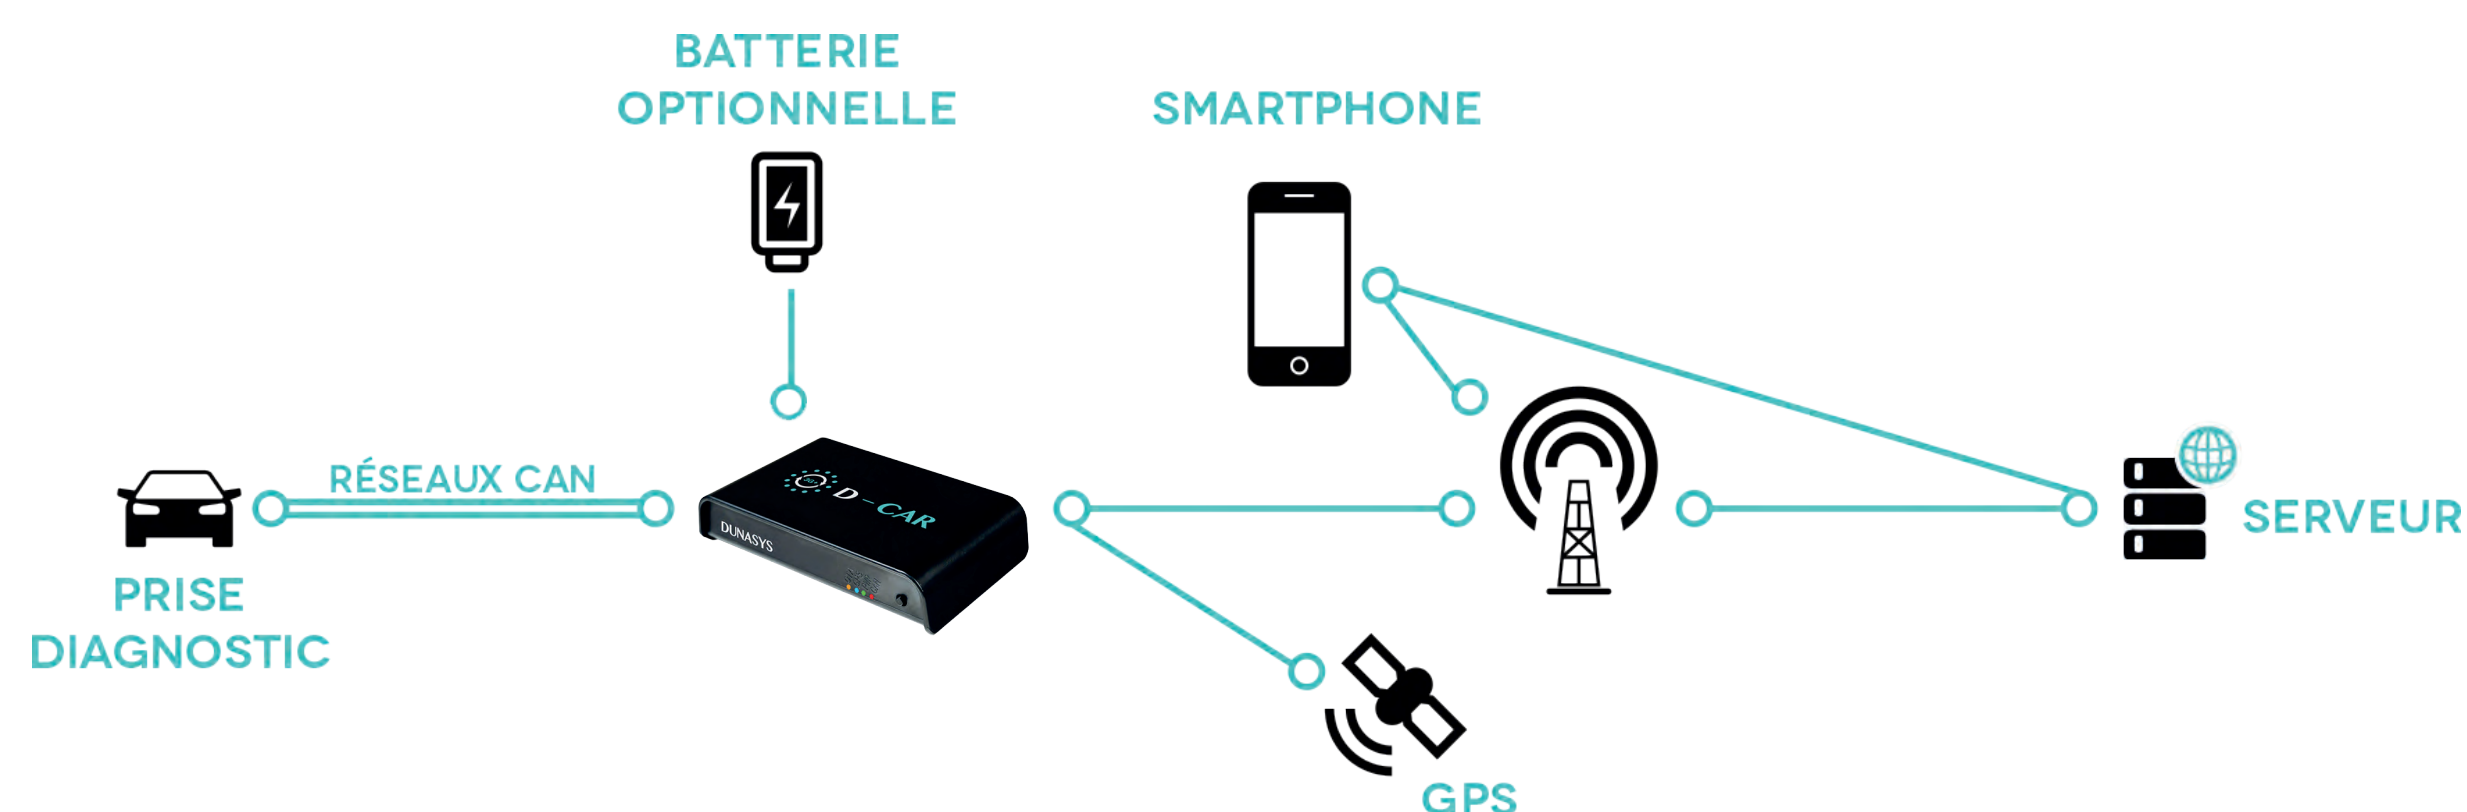

Dunasys carsharing in 5 steps :

- 1 Register now !** Register on the Autopartage application (Android or Apple iOS) and enter your logins and passwords. Then select an available vehicle nearby in real time.
- 2 Book your car !** Once you've booked your car, you'll be guided to it via geolocation.
- 3 Get access to your vehicle !** Unlock via mobile app or RFID badge.
- 4 Drive away !** Make your journey and return the vehicle to its starting point or to a drop-off point, depending on the parking spaces reserved.
- 5 Hand over the keys !** Once the keys have been placed in the vehicle, you can lock it and finish your booking.

Technical data

The KIT Hardware enabling :

- ▶ Vehicle open/close control
- ▶ Activation/deactivation of immobilizer
- ▶ Vehicle control via mobile applications and/of RFID badges
- ▶ Auxiliary battery level readout
- ▶ Reading of fuel/propulsion battery level
- ▶ Fault code feedback
- ▶ Odometer reading
- ▶ Opening/closing of doors via CAN and reading of vehicle information

The Hardware Kit includes :

- ▶ DCAR-S box (DCAR SHARING)
- ▶ Fix Key cables for driver identification
- ▶ OBD cables (Y plug) for power supply
- ▶ SIM card for connectivity
- ▶ RFID reader for vehicle access via RFID badge

